


1. Start VCOM and Click “Search” to search the Printer in the intranet.
2. Select the Decice No.
3. Click “Configure” and input the Account: *admin* and the password: *systeme*

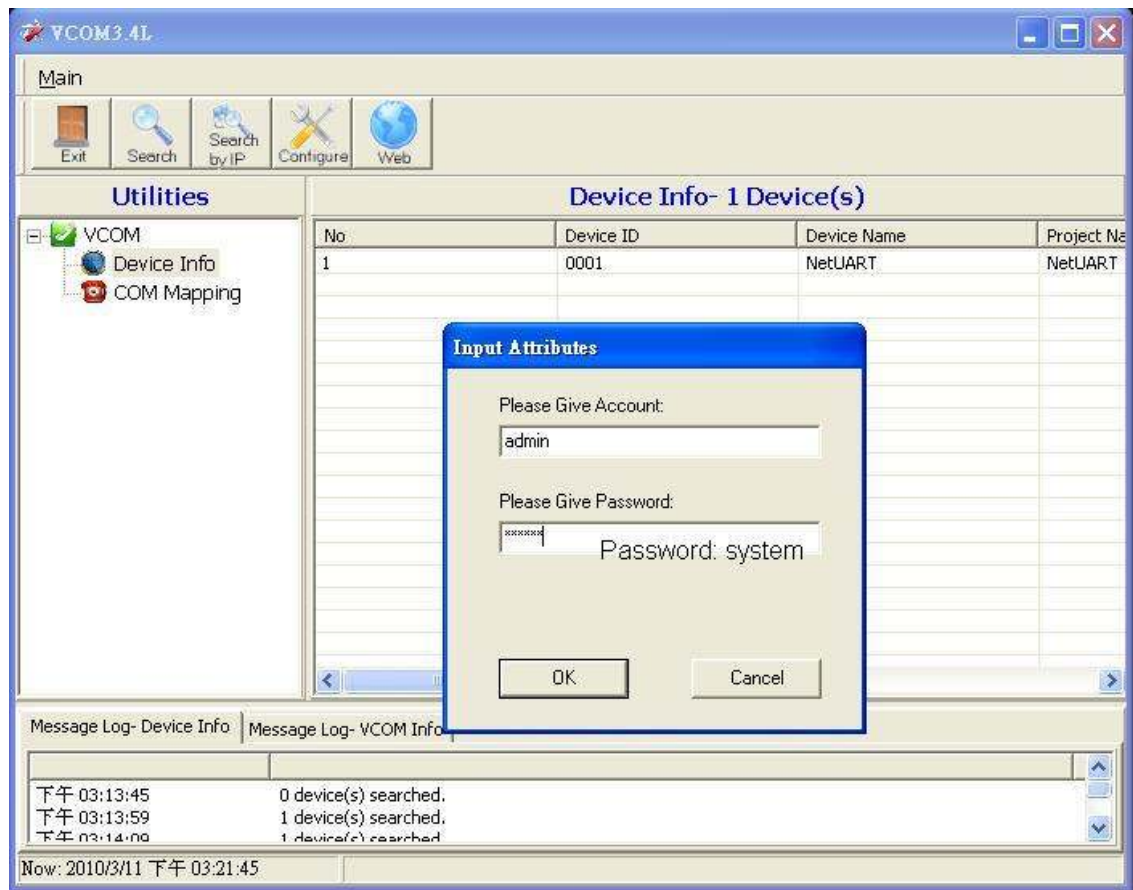

4. Setup the suitable TCP/IP

Configure Dialog

Administrator

IP Address
192.168.1.190

Subnet Mask
255.255.255.0

Gateway
192.168.1.1

DNS
192.168.1.1

IP Configure

Static
 DHCP

5. Select the UART Baudrate = 19200

Configure Dialog

Nickname
NetUART Only '0-9', 'a-z', 'A-Z', '_', '-' allowed

UART

Mode
RS232

Baudrate
19200

Character Bits
8

Parity Type
none

6. Set the Data Port Number = **9100**

The image shows a 'Configure Dialog' window with the following settings:

- Top field: 5 (range: (1~255)*200ms)
- TCP Mode: Telnet Server/Client
 - Disable
 - Server
 - Client
- Data Port Number: 9100 (highlighted with a red oval)
- Remote Server IP Address: 210.200.181.102
- Client mode inactive timeout: (field is empty)

7. Click OK to finish setting.

Configure Dialog

	<input type="text" value="0"/>
IP8	<input type="text" value="0.0.0.0"/>
Port8	<input type="text" value="0"/>
IP9	<input type="text" value="0.0.0.0"/>
Port9	<input type="text" value="0"/>
IP10	<input type="text" value="0.0.0.0"/>
Port10	<input type="text" value="0"/>